
CV Manual

SV Modular



October, 2019

CV Users Manual



Figure 1: CV Image

CV provides a constant voltage between 0 volts and 10 volts when active.

CV is divided into two parts, each providing the same functionality, making it two *Miniature* modules.

The ON switch will light up when the voltage is active, otherwise the output will be a constant 0 volts.

The VAL parameter adjusts the voltage level from 0 volts to 10 volts.

OUT provides the output of the module.